

HEARTWOOD™ WOODSTOVE

Model VG820E Owners Manual

(save this manual for future reference)

READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION OR OPERATING THE STOVE. FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT IN PROPERTY DAMAGE, BODILY INJURY, OR EVEN DEATH.

DO *NOT* USE THIS STOVE IN A MOBILE HOME, MANUFACTURED HOME, TRAILER OR TENT – *NO EXCEPTIONS!*

This stove meets
U.S. Test Standard:
UL 1482-1996

Warnock Hersey



SAFETY INSTRUCTIONS

SAFETY NOTICE: IF THIS STOVE IS NOT PROPERLY INSTALLED, A HOUSE/BUILDING FIRE MAY RESULT. FOR YOUR SAFETY, CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT PERMITS, RESTRICTIONS, AND INSTALLATION REQUIREMENTS FOR YOUR AREA.

READ ALL INSTRUCTIONS CAREFULLY.

1. The installation of this stove must comply with your local building code rulings. Please observe the clearances to combustibles (see reference figures 3 – 5).
2. Verify that the stove is properly installed before firing the stove for the first time. After reading these instructions, if you have any doubt about your ability to complete your installation properly, you must obtain the services of a professional licensed installer familiar with all aspects of safe and correct installation. DO NOT use temporary or makeshift compromises during installation.
3. DO NOT store wood, flammable liquids or other combustible materials too close to the unit. Refer to certification label on back of unit and reference figures 3 – 5 in this manual.
4. **Do not install this stove in a mobile home, manufactured home, trailer or tent** (NO EXCEPTIONS! per HUD Federal Standard: 24 CFR Ch.XX).
5. If any parts are missing or defective, please notify the dealer or manufacturer immediately. DO NOT OPERATE A STOVE THAT IS MISSING ANY PARTS!.
6. Do not tamper with combustion air control beyond normal adjustment capacities.
7. Always connect this stove to a chimney and vent to the outside. Never vent to another room or inside a building. DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE SERVING ANOTHER APPLIANCE.
8. **DO NOT CONNECT** a wood burning stove to an aluminum Type B gas vent. This is not safe. Use approved masonry or a UL 103 HT Listed Residential Type and Building Heating Appliance Chimney. Use a 6" diameter chimney or larger, that is high enough to give a good draft. (See specifics in installation instructions).

continued on next page



Vogelzang International Corporation
400 West 17th Street
Holland, Michigan 49423
www.vogelzang.com
Phone: 1-616-396-1911 Fax: 1-616-396-1971

SAFETY INSTRUCTIONS *continued...*

9. Be sure that your chimney is safely constructed and in good repair. Have the chimney inspected by the fire department or a qualified inspector. Your insurance company should be able to recommend a qualified inspector.
10. Creosote or soot may build up in the chimney connector and chimney and cause a house/building fire. Inspect the chimney connector and chimney twice monthly during the heating season and clean if necessary. (See Chimney Maintenance, page 12).
11. In the event of a chimney fire, turn the air control to closed position, leave the building and **CALL THE FIRE DEPARTMENT IMMEDIATELY!** Have a clearly understood plan on how to handle a chimney fire by contacting your local fire authority for information on proper procedures in the event of a chimney fire.
12. To prevent injury, do not allow anyone to use this stove who is unfamiliar with the correct operation of the stove.
13. Do not operate stove while under the influence of drugs or alcohol.
14. Ashes should not be allowed to accumulate higher than the ash pan. Dispose of ashes in a metal container with a tight fitting lid. Keep the closed container on a noncombustible floor or on the ground, well away from all combustible materials. Keep the ashes in the closed container until all cinders have thoroughly cooled. The ashes may be buried in the ground or picked up by a refuse collector.
15. The special paints used on your stove may give off some smoke and an odor while they are curing during the first 12 to 15 fires. Additional smoke and odor may be emitted from the light oils used in construction of the fire box. This should disappear after a short period of time and not occur again. Persons with lung conditions or owners of susceptible domestic pets (such as birds) should take prudent precautions. Open windows and doors as needed to clear smoke and/or odor. Paint discoloration will occur if the stove is overfired.
16. This stove has a painted surface which is durable but it will not stand rough handling or abuse. When installing your stove, use care in handling. Clean with soap and warm water when stove is **NOT** hot. Do not use any acids or scouring soap, as these solvents wear and dull the finish.
17. While stove is in operation, all persons, especially young children should be alerted to the hazards from high surface temperatures. Keep away from a hot stove to avoid burns or clothing ignition.
18. If small children will be in the same room as the stove during operation, provide a sturdy barrier to keep them at a safe distance from the stove. **NEVER LEAVE SMALL CHILDREN UNSUPERVISED** when they are in the same room as the stove.
19. Keep stove area clear and free from all combustible materials, gasoline, and other flammable vapors and liquids.
20. To prevent burns, always wear protective clothing, leather hearth gloves and eye protection, while tending the fire.
21. While in operation, keep the feed door, ash door, and cabinet door closed and secured at all times except while tending the fire.
22. Do not overfire the stove. Overfiring will occur if the feed door or ash door is left open during operation. Such actions can result in very dangerous operating conditions.
23. All power cords and electrical appliances and/or assemblies must be kept outside of the clearance dimensions shown in this manual for combustible materials.
24. For further information on using your stove safely, obtain a copy of the National Fire Protection Association (NFPA) publication, "Using Coal and Wood Stoves Safely" NFPA No. HS-10-1978. The address of the NFPA is Batterymarch Park, Quincy, MA 02269.

NOTE: A PROFESSIONAL, LICENSED HEATING AND COOLING CONTRACTOR SHOULD BE CONSULTED IF YOU HAVE QUESTIONS REGARDING THE INSTALLATION OF THIS SOLID FUEL BURNING APPLIANCE.

ASSEMBLY INSTRUCTIONS

NOTICE: Vogelzang International Corp. grants no warranty, stated or implied, for the installation or maintenance of your wood stove and assumes no responsibility of any incidental or consequential damages.

TOOLS AND MATERIALS REQUIRED FOR INSTALLATION

TOOLS	MATERIALS
Pencil	(NOTE: The following items are NOT included with your stove)
6 foot Folding Rule or Tape Measure	Chimney Connection: 6" black steel (24 ga. min.) straight stove pipe or elbow (as required)
Tin Snips	1/2" Sheet Metal Screws
Drill: Hand or Electric	Chimney: Existing 6" Lined Masonry Chimney or 6" Inside Dia. listed Type 103 HT chimney.
1/8" dia. Drill Bit (sheet metal screws)	Flooring Protection: 42" x 60" as specified (see page 3)
1/4" dia. Drill Bit (damper installation)	Furnace Cement (manufacturer recommends Rutland Code 78 or equivalent)
Screwdriver (blade & Phillips types)	
6mm Nut Driver or Ratchet with 6mm Socket	
Safety Glasses	
Gloves	

1. Uncrate the stove and remove cardboard packing and protective poly bag. (Save cardboard for further assembly.)
2. Remove legs, upper and lower heat shields, damper, and hardware pack from inside firebox.
3. Place flattened carton behind stove and carefully turn stove onto its back.
5. Place both legs upside down and attach the heat shield assembly (from step 4) between the legs. Align the holes in the heat shield assembly with those in the mounting flange of the leg assemblies and secure with four (4) self-tapping screws.

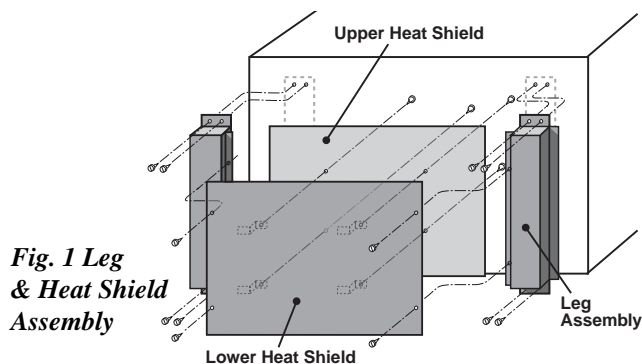


Fig. 1 Leg & Heat Shield Assembly

WARNING: METAL PANELS FASTENED BETWEEN LEGS ACT AS HEAT DEFLECTORS. THESE PANELS MUST BE IN PLACE FOR SAFE OPERATION.

4. Join the upper and lower heat shields with four (4) self-tapping screws (fig. 1).
6. Attach leg/heat shield assembly to the base of the stove using eight (8) self-tapping screws (fig. 1).
7. Carefully lift stove to upright position.
8. Locate the door knob and machine screw in the hardware pack. Open the cabinet door by reaching under the cabinet frame and pulling the door open.
9. Install the door knob onto the outside of the door. Install the machine screw through the latch bracket, door, and into the knob. Tighten securely (fig. 2).

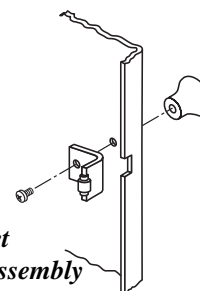


Fig. 2 Cabinet Door Knob Assembly

LOCATING STOVE

1. The stove must be placed on solid concrete, solid masonry, or when installed on a combustible floor, on a listed floor protector, such as Hy-C or Imperial Model UL 4260BK or equivalent. (NOTE: to calculate R-values of equivalent alternative materials, see page 17.) The base must extend at least 16" beyond the side with the access door, 8" to the sides of fuel opening, and **must** extend under the stove pipe if it is elbowed towards a wall. (See figures 3 & 4 and consult local building codes and fire protection ordinances).

CAUTION: (FIRE HAZARD) CARPETING AND OTHER COMBUSTIBLE MATERIAL SHALL NOT COVER THE FLOOR PROTECTOR. THESE MATERIALS MUST REMAIN OUTSIDE OF COMBUSTIBLE CLEARANCES, SEE FIG. 3 – 5.

2. The stove must have its own flue. **DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE SERVING OTHER APPLIANCES.**
3. After observing the clearances to combustible materials (figures 3 – 5), locate your floor protector accordingly (figure 3) and carefully place the stove in your selected location. Install stove pipe, elbows, and thimble as required, utilizing either a recently cleaned and inspected 6" masonry chimney or a 6" i.d. listed chimney.
4. Use 6" round black stove pipe, not galvanized stove pipe. Secure pipe sections with three (3) sheet metal screws in each stove

pipe and/or elbow joint to firmly hold the pipe sections together. **DO NOT CONNECT THIS STOVE TO ANY AIR DISTRIBUTION OR DUCT SYSTEM.**

5. Recheck clearances from the stove, connector stove pipe, and corner clearances using the illustrations in figures 3 – 5 and your local building codes or fire protection ordinances.


NOTE: Drywall faced with brick or stone must be considered a combustible surface.

6. **DO NOT INSTALL THIS STOVE IN A MOBILE HOME, MANUFACTURED HOME, TRAILER OR TENT – NO EXCEPTIONS! (HUD Federal Standard: 24 CFR Ch.XX)**
7. The clearances provided are minimum dimensions determined by Warnock-Hersey, the manufacturer's testing laboratory. Installation of this stove must comply with the latest edition of NFPA 211 for reduced clearances and/or your local building code rulings. Use whichever minimum dimensions are LARGEST.

Failure to follow these minimum clearance requirements may result in an unsafe installation and could cause a fire.

8. This stove meets U.S. Test Standard: UL 1482-1996.


CAUTION: KEEP FURNISHINGS AND OTHER COMBUSTIBLE MATERIALS AWAY FROM THE STOVE.

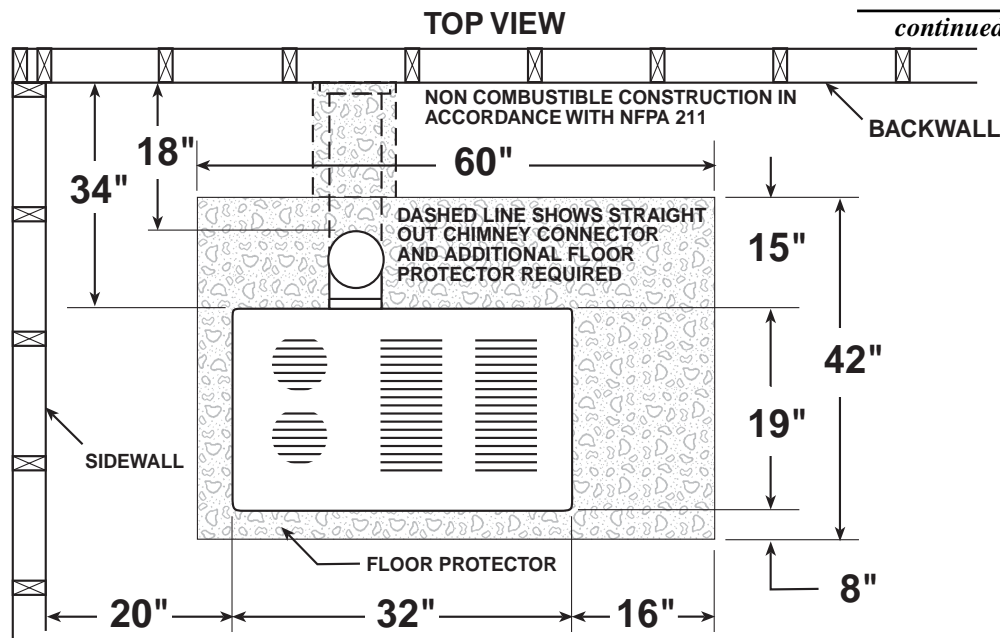

continued on next page

Fig. 3 – TOP VIEW Minimum Clearance Dimensions from Combustible Surfaces

LOCATING STOVE continued...

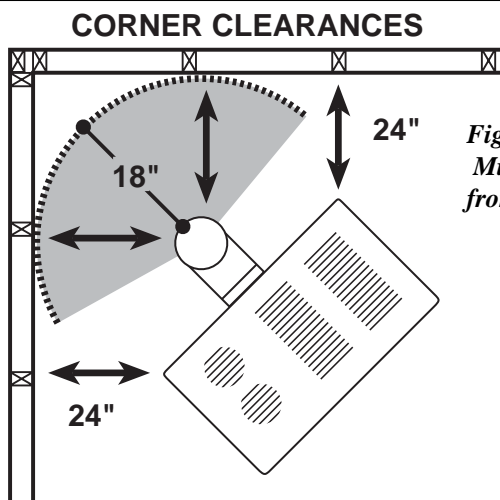

*Fig. 4 – Top View
Minimum Corner Clearances
from Combustible Surfaces*

NOTE: BEFORE FIRING WOODSTOVE SLIDE FIREBRICKS TOWARDS THE REAR SO NO GAPS REMAIN BETWEEN BRICKS.

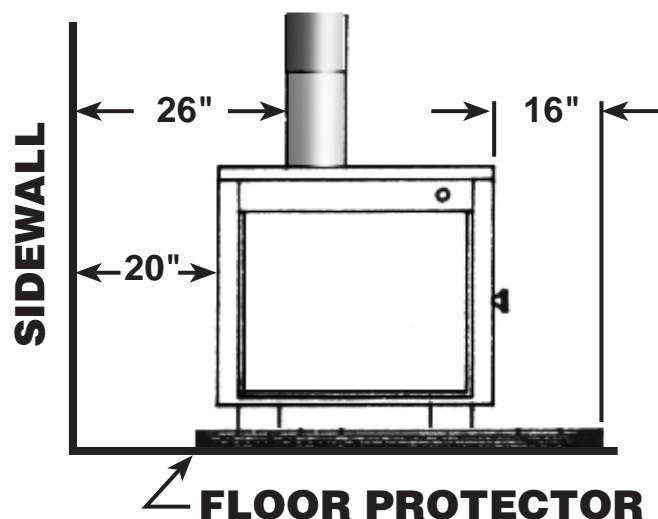


Fig. 5a – Front View

Minimum Clearance Dimensions from Combustible Surfaces

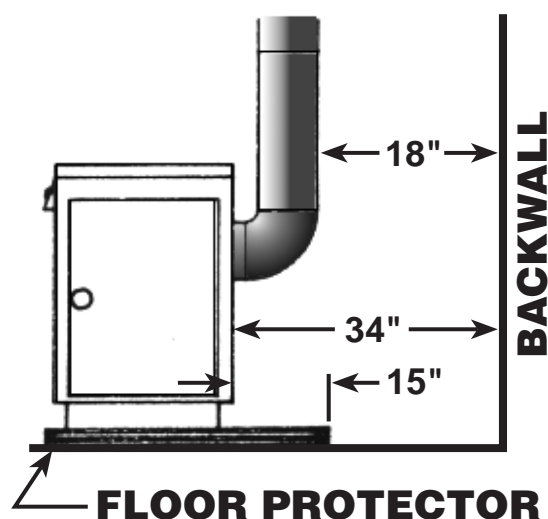


Fig. 5b – Side View

D-6 DRAFT DAMPER

A Draft Damper included with the stove must be installed in the first straight section of pipe exiting the stove before the stove pipe is connected and the wood stove is used.

1. Drill two 1/4" holes centered on either side of the pipe section 6" from the top end of the pipe (figure 6).
2. Remove the handle from the damper then slide the damper into the pipe.
3. Align the damper with the holes drilled in step 1 and insert the handle through the holes and the damper.

NOTE: This damper is necessary for the proper operation of the stove and to meet EPA emissions requirements for heating appliances. It **MUST** be installed before use. **(NO EXCEPTIONS)**

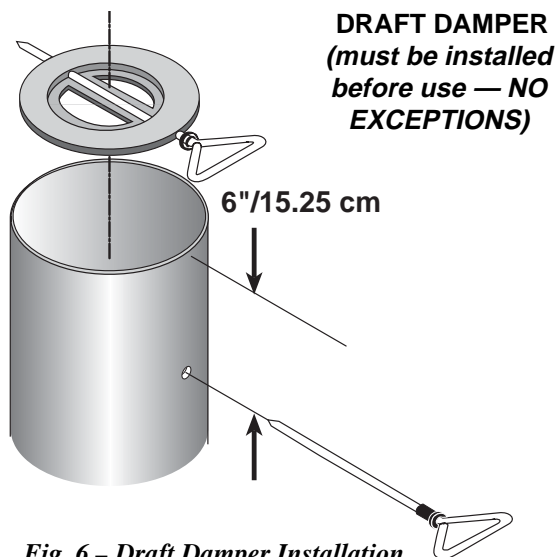


Fig. 6 – Draft Damper Installation

CONNECTOR PIPE INSTALLATION

1. The crimped end of the stovepipe fits inside the stove flue collar. Install additional pipe and elbow with the crimped end towards the stove. This will allow any condensation in the flue to run back into the firebox.
2. Horizontal pipe runs must slope upwards towards the chimney at least 1/4" per foot of horizontal run.
3. You must have at least 18 inches of clearance between any horizontal piping and the ceiling.
4. The pipe cannot extend into the chimney flue (figure 7).
5. Secure pipe/elbow sections with three (3) sheet metal screws at each joint to make the piping rigid.
6. It is recommended that no more than two (2) 90° bends be used in the stovepipe installation. The use of more than two 90° bends may decrease the amount of draw and possibly cause smoke spillage. Where possible, use only corrugated (nonadjustable) elbows. These provide a better seal.
7. The connector pipe must not pass through an attic or roof space, closet, or any concealed space, or floor, ceiling, wall or combustible construction. (See Chimney Connector Systems & Clearances, page 17). A UL 103 HT Listed chimney **must** be used from the first penetration of ceiling or wall to the chimney cap. **Never use single wall connector pipe as a chimney - a house fire could result.**

NOTE: STOVE PIPE IS NOT INCLUDED. TO PURCHASE, VISIT YOUR LOCAL HARDWARE, HOME OR BUILDING CENTER. SEE "LOCATING STOVE" PAGE 4 FOR ADDITIONAL SPECIFICATIONS.

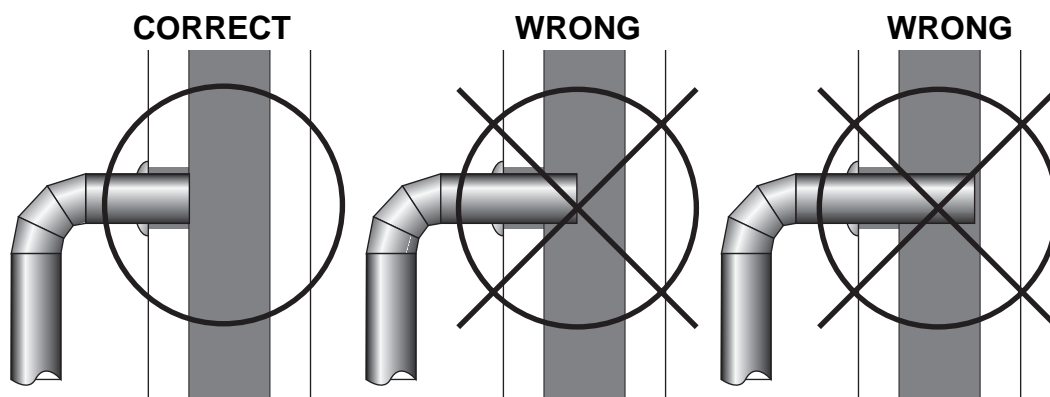


Fig. 7 – Stovepipe/Flue Connections

CHIMNEY CONNECTIONS

The stove must be connected to either a masonry or manufactured metal chimney built and tested to the specifications listed on the previous pages.

Chimneys perform two functions:

- 1). As a means of exhausting smoke and flue gases which are the result of fuel combustion.
- 2). The chimney provides “draft” which allows oxygen to be continuously introduced into the appliance, so that proper combustion is possible. This stove relies on natural draft to operate.

NOTICE: Always provide a source of fresh air into the room where the stove is located. Failure to do so may result in air starvation of other fuel burning appliances and the possible development of hazardous conditions, fire or death.

Your stove itself does not create draft. Draft is provided by the chimney. To achieve proper draft your chimney must meet the three minimum height requirements detailed in figures 9–11. A minimum of 0.05 w.c. (measured in water column) is required for proper drafting to prevent back puffing, smoke spillage, and to maximize performance. (Gauges to measure draft are readily available at stove stores and are economical to rent or purchase.)

Factors such as wind, barometric pressure, trees, terrain and chimney temperature can have an adverse effect on the draft. The manufacturer cannot be held responsible for external factors leading to less than optimal drafting.

Should you have a problem with inadequate draft, you should contact a licensed heating and cooling contractor for assistance in solving the problem.

IMPORTANT Installation Points

1. Size chimney flue to stove collar. This stove requires a 6” diameter flue.
2. Never connect this unit to a chimney serving another appliance.
3. The chimney must meet all minimum height requirements.
4. Never use a chimney to ventilate a cellar or basement.
5. Contact your local building authority for approved methods of installation and any necessary permits and/or inspections.

MASONRY CHIMNEY

Before using an existing masonry chimney, clean the chimney, inspect the flue liner and make any repairs needed to be sure it is safe to use. Make repairs before attaching the stove. The connector stove pipe and fittings you will need to connect directly to a masonry chimney are shown in figure 8.

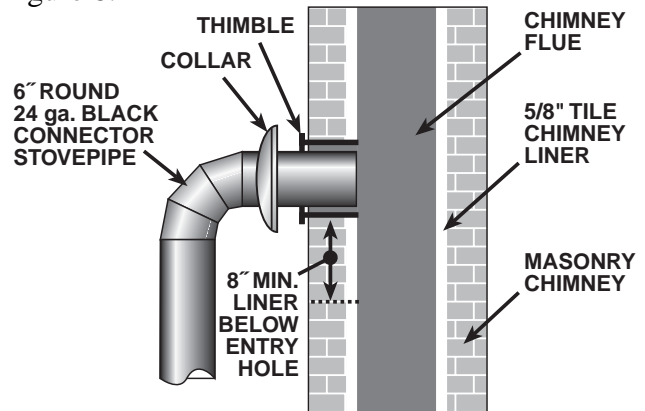


Fig. 8 - Masonry Chimney Connection

If the connector stove pipe must go through a combustible wall before entering the masonry chimney, consult a qualified mason or chimney dealer. The installation must conform to local building and fire codes and latest edition of NFPA 211.

If there is a cleanout opening in the base of the chimney, close it tightly.

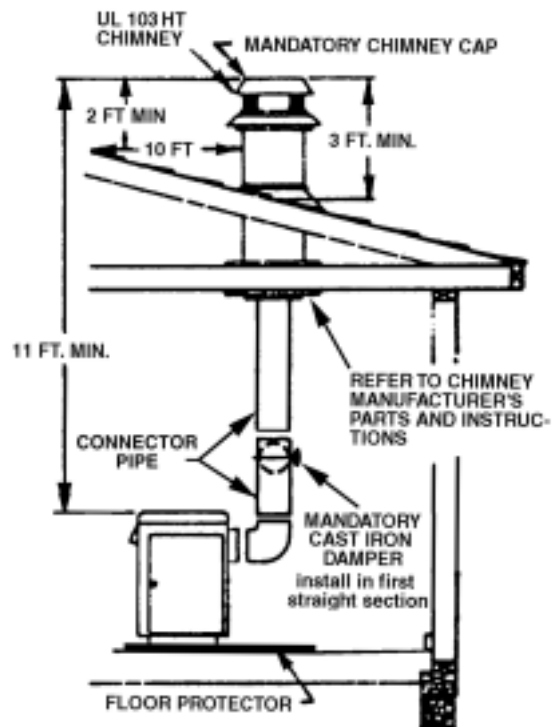


Fig. 9 - Chimney Construction Through Attic Space

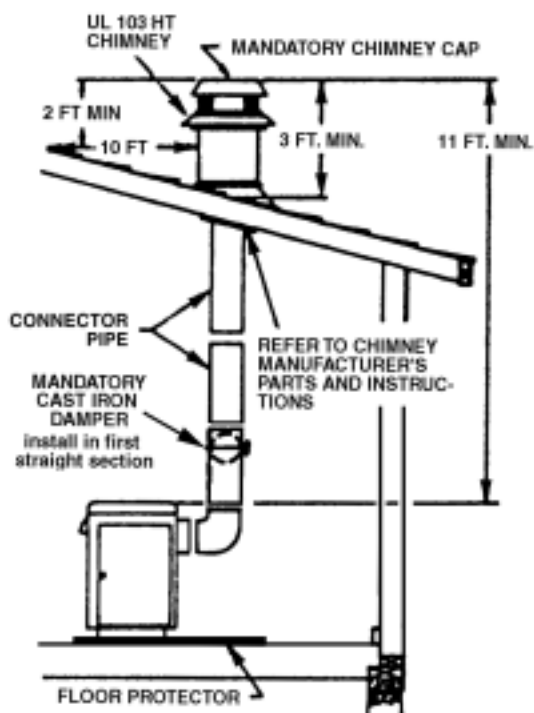


Fig. 10 - Chimney Construction Through Roof

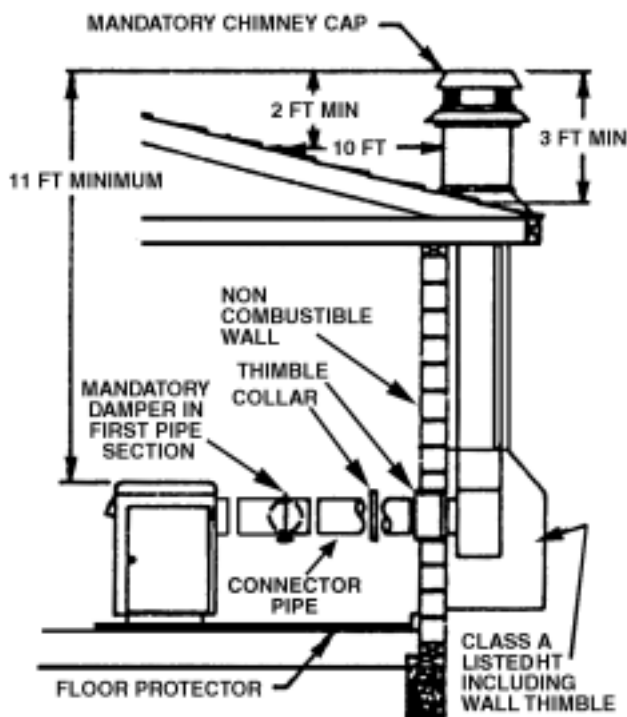


Fig. 11 - Chimney Connection to Firebox Through Masonry Wall

MANUFACTURED CHIMNEY

REFER TO CHIMNEY AND CHIMNEY CONNECTOR MAKER'S INSTRUCTIONS FOR INSTALLATION AND USE.

Use only 6" diameter listed chimney UL 103 HT. Chimney made to this listing is High Temperature rated to 2100 degrees Fahrenheit. Use chimney from only one manufacturer. Never mix brands. Carefully follow the chimney manufacturer's stated requirements and clearances. Use the chimney manufacturer's attic guards, roof supports, flashing and fire stops when passing through a ceiling. Use a listed thimble when passing through a combustible wall. Do not use makeshift compromises during installation. ***Never use a single-wall connection pipe as a chimney!***

When using a pre-existing chimney, have it's condition and installation inspected before using. Make sure that the chimney meets all of the UL rating requirements listed above. Be aware that not all manufactured chimney is of the UL 103 HT type.

NOTE: It is recommended that you contact a licensed heating and cooling contractor (consult your local yellow pages) for chimney installation.

Manufactured chimney with the proper required UL listing is available from most home centers, hardware stores, and HVAC supply stores.

If you have access to the internet, you may wish to view chimney manufacturers' information on-line. See, www.duravent.com, www.selkirkinc.com, or www.mtlfab.com.

VENTING TO EXISTING FIREPLACE

In some instances, people desire to convert an existing fireplace for stove use. Usually, safe connection to an existing masonry chimney requires more work than using a prefabricated chimney. The existing fireplace must be closed and sealed at the damper with high-temperature caulk, ceramic wool, or furnace cement. Prior to installation, clean and inspect the existing flue and smoke shelf. Installation should be designed so the system can be dismantled for periodic cleaning and inspection. Before conversion, make sure the existing chimney is structurally sound, the chimney incorporates a flue liner and make sure it is in good condition.

Continued on nwxt page

CHIMNEY CONNECTIONS *continued ...*

(A flue liner consists of clay tile that protects the brickwork of a chimney. If a chimney does not have a liner, or it is damaged, have it relined by a professional. **DO NOT USE a chimney that is unlined or damaged!**) If you have any question regarding the condition of the chimney, consult a qualified licensed contractor, qualified engineer, competent mason, certified Chimney Sweep, or a knowledgeable inspector. Consult your insurance company if you cannot find a qualified expert.

CAUTION: Not all fireplaces are suitable for conversion to a wood stove. Check with a qualified expert.

Many prefabricated fireplaces are of the “zero-clearance fireplace” category. These consist of multilayered metal construction. They are designed with enough insulation and/or air cooling on the base, back and sides so they can be safely installed in direct contact with combustible floors and walls. Although many prefabricated fireplaces carry endorsements from nationally recognized organizations for use as fireplaces, they have not been tested for connection to wood stove heaters. Connecting a stove to such a device will void the manufacturer’s warranty.

Steel-lined fireplaces are constructed with 1/4” firebox liner, an air chamber in connection with 8” of masonry. These can be safely used with wood burning stoves. They contain all the essential components of a fireplace, firebox, damper, throat, smoke shelf, and smoke chamber. Many look identical to masonry fireplaces and should be checked carefully before connecting a stove to them.

Venting a stove directly into a fireplace does not meet code and should not be attempted. (This constitutes connection to another appliance - the fireplace.) Combustion products will be deposited and build up in the firebox or fireplace. The stove warranty will be void with such an installation. Do not create a hazard in your home by connecting in this manner.

FIREPLACE INSTALLATION

Directly connecting the stovepipe into the existing masonry chimney (figure 12 “Type A” fireplace conversion) of the fireplace is the only approved method of installation. This is a complicated and involved process and to insure safety should only be done by a qualified installer.

1. An entry hole must be cut through the masonry and tile liner with minimal damage to the liner. At least 8” of liner must remain below the entry position. When locating the stove and stovepipe, all minimum clearances must be observed from combustible surfaces including mantels, combustible trimwork, ceilings and walls. Positioning the center of the stove pipe entry into the chimney 24” below the ceiling should insure proper clearance for a 6” stovepipe.
2. Install a metal or fire clay (5/8” minimum thickness) thimble. Make sure the thimble is flush with the inner surface of the chimney liner and does not protrude into the flue (see figure 7 on page 6).
3. Secure the thimble with refractory mortar. The thimble should be surrounded by 8” of solid unit masonry brickwork or 24” of stone.
4. Install the stovepipe into the thimble as far as possible without extending past the flue lining (see figures 7 & 8 on pages 6 & 7).
5. A small airspace (about 1/2”) should remain between the stovepipe and thimble to allow for expansion of the pipe. Seal this airspace with high-temperature caulking or ceramic wool.

Continued on next page

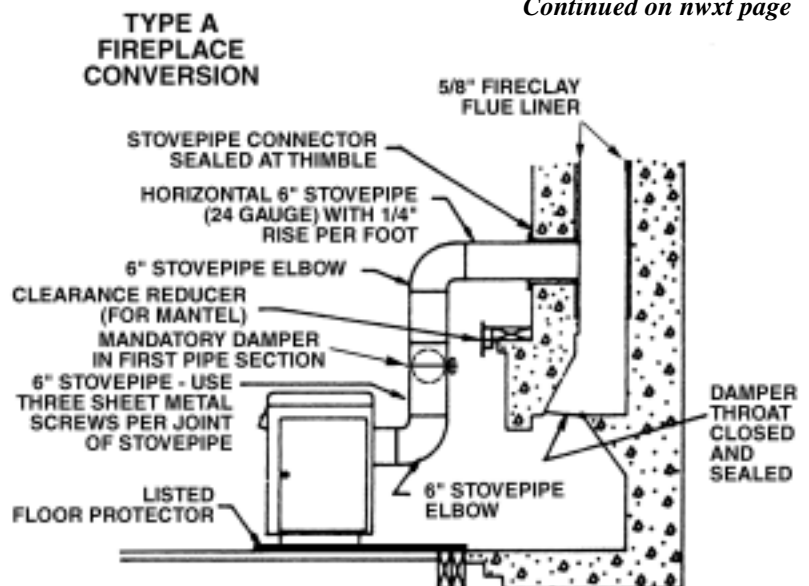


FIG. 12 - Fireplace Conversion

CHIMNEY CONNECTIONS *continued ...*

- Secure and seal the damper in the closed position using high-temp caulking, ceramic wool, or furnace cement. Also check to see if the chimney has a cleanout. If it does, make sure it is closed and sealed as well. A leaky cleanout will greatly reduce draft efficiency.

If you have any questions regarding venting your stove, contact the manufacturer or contact the National Fire Protection Association (NFPA) and request a copy of the latest editions of NFPA Standard 211 and NFPA Standard 908. Their address is:

Battery March Park, Quincy, MA 02269.

OPERATING INSTRUCTIONS

CAUTION: HOUSE FIRE HAZARDS

- DO NOT STORE WOOD ON FLOOR PROTECTOR, UNDERNEATH STOVEPIPE OR ANYWHERE WITHIN MINIMUM CLEARANCES FROM COMBUSTIBLE SURFACES SPECIFIED FOR THIS STOVE. (36")
- OVERFIRING MAY CAUSE A HOUSE FIRE. YOU ARE OVERFIRING IF A UNIT OR CHIMNEY CONNECTOR GLOWS RED.
- BUILD FIRES ONLY ON INTEGRAL GRATE INCLUDED WITH THE STOVE.

OPERATING SAFETY PRECAUTIONS

1. NEVER OVERFIRE THIS STOVE BY BUILDING EXCESSIVELY HOT FIRES AS A HOUSE/BUILDING FIRE MAY RESULT. YOU ARE OVERFIRING THE STOVE IF UNIT OR STOVEPIPE BEGINS TO GLOW OR TURN RED.
2. NEVER BUILD EXTREMELY LARGE FIRES IN THIS TYPE OF STOVE AS DAMAGE TO THE STOVE OR SMOKE LEAKAGE MAY RESULT.
3. UNIT IS HOT WHILE IN OPERATION. KEEP CHILDREN, CLOTHING, AND FURNITURE AWAY. CONTACT MAY CAUSE SKIN BURNS. DO NOT TOUCH THE STOVE AFTER FIRING UNTIL IT HAS COOLED.
4. PROVIDE AIR INTO THE ROOM FOR PROPER COMBUSTION.
5. INSPECT STOVEPIPE EVERY 60 DAYS. REPLACE IMMEDIATELY IF STOVEPIPE IS RUSTING OR LEAKING SMOKE INTO THE ROOM.

WARNING: EXPLOSION HAZARD

- NEVER USE CHEMICALS, GASOLINE, GASOLINE-TYPE LANTERN FUEL, KEROSENE, CHARCOAL LIGHTER FLUID, OR SIMILAR FLAMMABLE LIQUIDS TO START OR "FRESHEN-UP" A FIRE IN THE STOVE.
- KEEP ALL FLAMMABLE LIQUIDS, ESPECIALLY GASOLINE, OUT OF THE VICINITY OF THE HEATER — WHETHER IN USE OR IN STORAGE.

This stove is designed to burn WOOD FUEL ONLY.

Hardwood, 20" to 24" should be split and air dried (seasoned), for 6 months to obtain maximum burning efficiency. Wood should be stored in a dry, well ventilated area.

NOTICE: USE SOLID WOOD MATERIALS ONLY. DO NOT BURN GARBAGE OR FLAMMABLE FLUIDS. DO NOT USE COAL AS COAL OR CHARCOAL WILL DESTROY THE GRATES AND/OR FIREBOX.

NOTE: Spin draft is factory set to meet EPA regulations and is not adjustable. Draft induction is controlled by thermostat setting (see page 11).

LIGHTING

1. Set the thermostat on "HIGH" and open pipe draft damper to provide maximum draft.
2. Using the separable handle, open the feed door and place paper and kindling on the grate for starting the fire.
3. Light fire, close feed door and secure tightly.

Continued on next page

OPERATING INSTRUCTIONS *continued ...*

4. Add fuel after fire is burning briskly. Use care not to smother the kindling fire when adding wood.
5. Set the thermostat to maintain desired temperature. "MEDIUM" setting is normally satisfactory. Set higher or lower for your personal comfort level.

ADDING FUEL

When possible, add small amounts of fuel each hour or so instead of piling large quantities of fuel every 4 to 5 hours. This will give a more complete combustion process and less buildup of tars, soot, or creosote will occur in the chimney.

1. Set thermostat to "HIGH" and open pipe draft damper before opening the feed door.
2. Empty ash pan regularly. Do not allow ashes

to pile up higher than the sides of the ash pan. If ashes build up to the grate, it can warp and burnout will occur. If allowed to overfill, ashes may spill when removing the pan.

3. Properly dispose of hot ashes (see Safety Instructions, item #14 on page 2).

Minimum Fire

The rate of burning at the "LOW" thermostat setting can be further controlled by adjusting the flue draft damper.

1. Fully close the thermostat and draft damper to make the fuel burn longer.
2. To increase rate of burn turn up the thermostat or open the draft damper. This will help reduce the formation of creosote or soot (see notes on Chimney Maintenance, page 12.)

THERMOSTAT

The thermostat controls the rate of burn by opening or closing a draft damper on the lower front of the firebox. The thermostat control was calibrated at the factory and is not adjustable. The thermostat is mounted behind the front control panel and the damper is mounted to the lower front of the firebox. The cabinet lid may be opened (when stove has cooled) for access to these components.

CAUTION: DO NOT OPEN OR CLOSE TOP WHEN HEATER IS HOT!

1. To open, when stove has cooled grasp the cabinet top at front (figure 13A) and lift all the way up.
2. Gently lower the top until the top support rod latches to hold the top in the up position (figure 13B).
3. To close, lift the top until the support rod is unlatched.
4. Pull the support rod forward as you lower the cabinet top.

CAUTION: DO NOT OPEN TOP WHEN HEATER IS HOT!

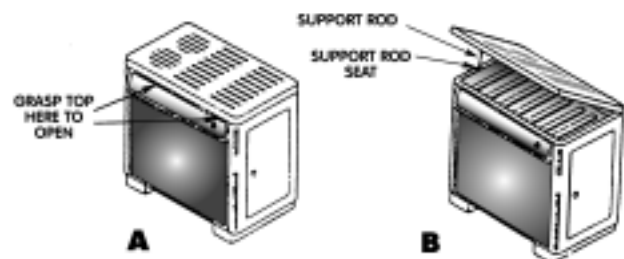


Fig. 13
Thermostat Access

If the room temperature is not satisfactory, check the following items.

To decrease the amount of heat at "LOW" setting:

1. Check feed and ash doors to be sure that they are closed and secured tightly.
2. Check the connector pipe to see that it is sealed in the flue collar and at all joints.
3. Make sure the flue draft damper is fully closed.

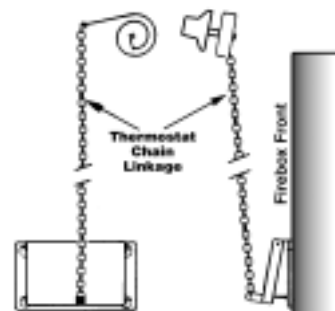


Fig. 14
Thermostat / Damper

SERVICE HINTS

DRAFT is a function of the chimney, not the stove — do not expect the stove to draw. Smoke spillage into the house or excess buildup of condensation or creosote in the chimney are warnings that the chimney is NOT functioning properly. Correct the problem before using the stove. Following are some possible causes for improper draft.

1. The connector stovepipe may be pushed into the chimney too far, stopping the draft.

2. If the chimney is operating too cool, water will condense in the chimney and run back into the stove. Creosote formation will be rapid and may block the chimney. Operate the stove at a fire level high enough to keep the chimney warm preventing this condensation.

3. If the fire burns well but sometimes creates excessive smoke or burns slowly, it may be caused by the chimney top being lower than another part of the house or a nearby tree. The wind blowing over a house or tree, falls on top of the chimney like water over a dam, beating down the smoke. The top of the chimney should be at least three (3) feet above the roof and be at least two (2) feet higher than any point of the roof within ten (10) feet (see figures 9–11).

NOTE: A DRAFT READING OF 0.05 TO 0.06 W.C. (WATER COLUMN) IS SUGGESTED FOR PROPER BURNING OF THIS STOVE.

CHIMNEY MAINTENANCE

CREOSOTE – Formation and Removal

When wood is burned slowly, it produces tar and other organic vapors which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining. If ignited, this creosote creates an extremely hot fire which may ignite surrounding materials resulting in a building fire.

The chimney connector and chimney should be inspected at least **twice a month** during the heating season to determine if a creosote buildup has occurred.

If creosote has accumulated, it should be removed. Failure to remove creosote may result in ignition and may cause a house/building fire. Creosote may be removed using a chimney brush or other commonly available materials from your local hardware retailer.


Chimney fires burn very hot. If the unit or chimney connector should glow red, reduce the fire by closing the inlet air control and immediately call the fire department.

CAUTION: A CHIMNEY FIRE MAY CAUSE IGNITION OF WALL STUDS OR RAFTERS WHICH WERE ASSUMED TO BE A SAFE DISTANCE FROM THE CHIMNEY. IF A CHIMNEY FIRE HAS OCCURRED, HAVE YOUR CHIMNEY INSPECTED BY A QUALIFIED EXPERT BEFORE USING AGAIN.

A fire in the firebox may be smothered by pouring a large quantity of coarse salt, baking soda, or cool ashes on top of the fire.

ORDERING PARTS - VG820E HEARTWOOD STOVE


When ordering missing or replacement parts, always give the **Model Number** of the stove, **Part Number**, and **Part Description**. Use the illustrations and part lists provided on the following pages to identify parts.

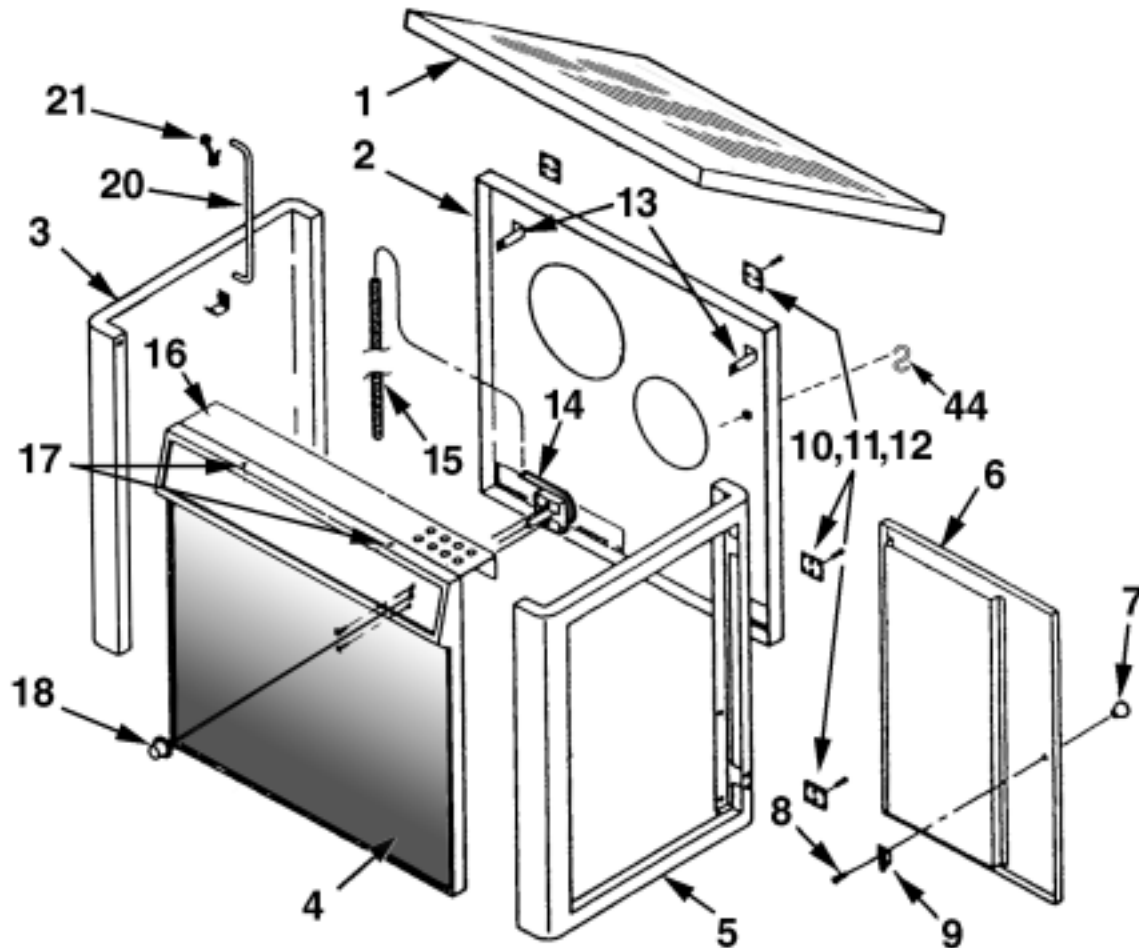

Part No.	Description	Qty.	Part No.	Description	Qty.
1	Cabinet Top	1	12	Hinge, Door	4
2	Cabinet, Back	1	13	Back Brace	2
3	Cabinet, Left Side	1	14	Thermostat Assembly	1
4	Cabinet, Front Assembly	1	15	Chain Linkage, Thermostat	1
5	Cabinet, Door Frame	1	16	Top Shield, Thermostat	1
6	Cabinet, Door	1	17	Screw, No.10 Torx	2
7	Knob, Cabinet Door	1	18	Knob, Thermostat	1
8	Screw, 8-32x1/4" Machine	1	19		
9	Latch, Spring	1	20	Support, Hinge	1
10	Nut, 10-24	8	21	Clip, Hinge	1
11	Screw, 10-24x1/2" Flat Hd.	8			

ORDERING PARTS - VG820E HEARTWOOD STOVE

When ordering missing or replacement parts, always give the **Model Number** of the stove, **Part Number**, and **Part Description**. Use the illustrations and part lists provided on the following pages to identify parts.

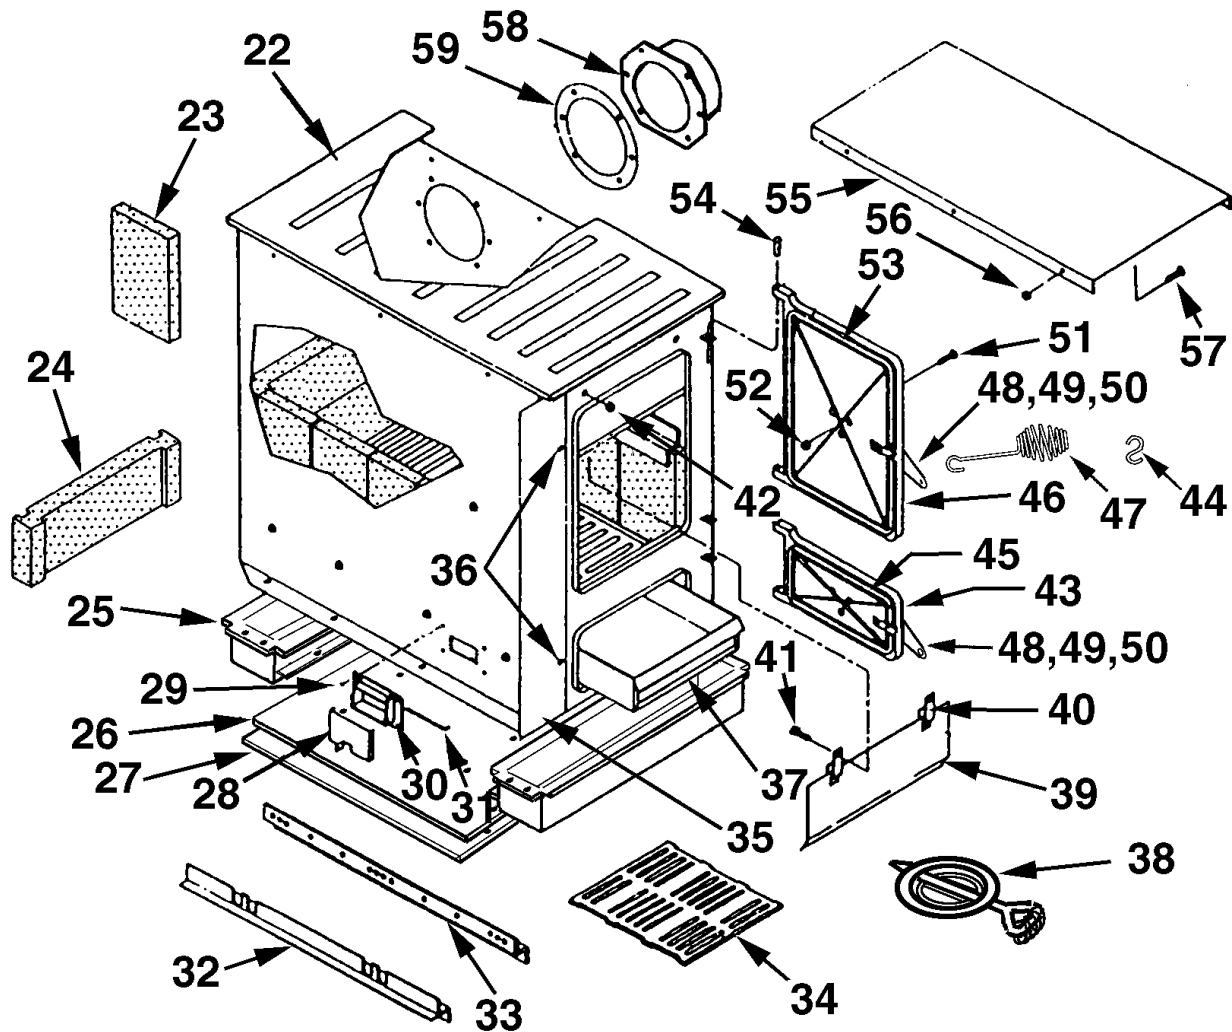

Part No.	Description	Qty.	Part No.	Description	Qty.
22	Firebox Assembly	1	41	Screw, 1/4-20x3/4" Flat Hd	1
23	Firebrick	10	42	Nut, 1/4-20	1
24	Liner, Front & Rear	3	43	Door, Ash	1
25	Leg	2	44	S-Hook (to hang separable handle)	1
26	Heat Shield, Upper	1	45	Gasket, 29" Ash Door	1
27	Heat Shield, Lower	1	46	Door Assembly, Feed	1
28	Draft Control	1	47	Handle, Separable (Spring)	1
29	Clip, Spring	1	48	Handle	2
30	Frame, Draft Damper	1	49	Latch, Door	2
31	Pin, Draft Damper	1	50	Spacer	2
32	Support, Grate & Liner	2	51	Screw, 1/4-20x3/4" Mach	1
33	Retainer, Top Brick	2	52	Pin, Keeper	1
34	Fire Grate	2	53	Gasket, 45" Feed Door	1
35	Shield, Front	1	54	Pin, Door Hinge	4
36	No. 10x1/2" Torque H.D.	2	55	Liner, Top	1
37	Ash Pan Assembly	1	56	Nut, 1/4-20 Kep	6
38	Damper Assembly (flue mount)	1	57	Screw, 1/4-20x3/4" Flat Hd.	6
39	Smoke Curtain	1	58	Flue Collar	1
40	Bracket, Smoke Curtain	1	59	Gasket	1

FLOOR PROTECTOR MATERIAL CALCULATIONS

This stove has been tested for and must be installed on a floor protector with the proper Thermal Resistance or R-value as stated in the installation instructions on page 3, “Locating Stove” step 1, of this manual. If the floor protector materials listed in the instructions are not available, materials with an equivalent R-value may be substituted.

Alternate materials may be rated with C-factor (Thermal Conductance) or k-factor (Thermal Conductivity) ratings which must be converted to R-value to determine if the alternate material meets the tested requirements. The following instructions provide the proper information and formulas for conversion to R-value.

To determine if alternate materials are acceptable follow this sequence.

1. Convert material specifications to R-value:
 - a. R-value given — no conversion necessary
 - b. k-factor is given with a required thickness (T) in inches:
$$R = 1/k \times T$$
 - c. C-factor is given: $R = 1/C$
2. Determine the R-value of proposed alternate floor protector:
 - a. Use formulas in step 1 above to calculate R-value of proposed material(s).
 - b. For multiple layers, add R-values of each layer to determine overall R-value.
3. If the overall R-value of the floor protector system is equal to or greater than the floor protector specifications given, the alternate is acceptable.

Definitions:

$$\text{Thermal conductance (C)} = \frac{\text{BTU}}{(\text{hr})(\text{ft}^2)(^\circ\text{F})} = \frac{\text{W}}{(\text{m}^2)(^\circ\text{K})}$$

$$\text{Thermal conductivity (k)} = \frac{(\text{Btu})(\text{inch})}{(\text{hr})(\text{ft}^2)(^\circ\text{F})} = \frac{\text{W}}{(\text{m})(^\circ\text{K})} = \frac{\text{Btu}}{(\text{hr})(\text{ft})(^\circ\text{F})}$$

$$\text{Thermal resistance (R)} = \frac{(\text{ft}^2)(\text{hr})(^\circ\text{F})}{\text{Btu}} = \frac{(\text{m}^2)(^\circ\text{K})}{\text{W}}$$

Example:

The specs of floor protector material should be 3/4-inch thick material with a k-factor of 0.84.

The proposed alternative material is 4” brick with a C-factor of 1.25 over 1/8-inch mineral board with a k-factor of 0.29.

Step 1: Convert specs to R-value.

$$R = 1/k \times T = 1/0.84 \times 0.75 = 0.893 \quad \text{System must have a R-value of } 0.893 = R_{\text{specs}}$$

Step 2: Calculate R-value of individual components

$$4'' \text{ Brick with C-factor} = 1.25. \quad R = 1/C = 1/1.25 = 0.80 = R_{\text{brick}}$$

$$1/8\text{-inch (0.125'')} \text{ mineral board with k-factor} = 0.29. \quad R = 1/0.29 \times 0.125 = 0.431 = R_{\text{min.brd.}}$$


Step 3: Add R-values of components to get total R-value of system

$$R_{\text{brick}} + R_{\text{min.brd}} = 0.80 + 0.431 = 1.231 = R_{\text{system}}$$

Step 4: Compare Rsystem to Rspecs

Rsystem = 1.231 is larger than Rspecs of 0.893. System R-value exceeds the required specifications and therefore is an acceptable alternative.

CHIMNEY CONNECTOR SYSTEMS & CLEARANCES

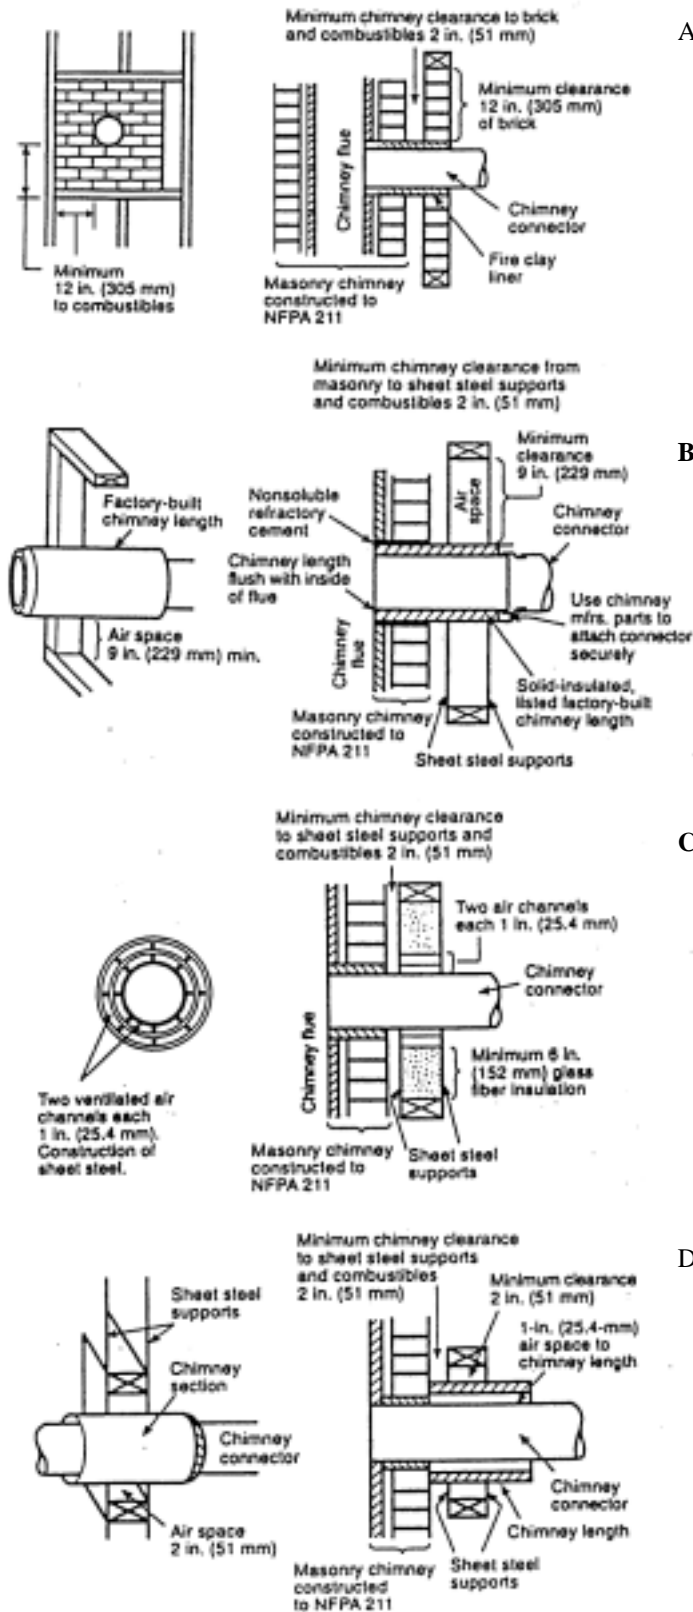

A. Brick Masonry

Minimum 3.5-inch thick brick masonry all framed into combustible wall with a minimum of 2-inch brick separation from clay liner to combustibles. The fireclay liner shall run from outer surface of brick wall to, but not beyond, the inner surface of chimney flue liner and shall be firmly cemented in place.

B. Insulated Sleeve

Solid-insulated, listed factory-built chimney length of the same inside diameter as the chimney connector and having 1-inch or more of insulation with a minimum 9-inch air space between the outer wall of the chimney length and combustibles.

C. Ventilated Thimble

Sheet steel chimney connector, minimum 24 gauge in thickness, with a ventilated thimble, minimum 24 gauge in thickness, having two 1-inch air channels, separated from combustibles by a minimum of 6-inch of glass fiber insulation. Opening shall be covered, and thimble supported with a sheet steel support, minimum 24 gauge in thickness.

D. Chimney Section Pass-through

Solid insulated, listed factory-built chimney length with an inside diameter 2-inch larger than the chimney connector and having 1-inch or more of insulation, serving as a pass-through for a single wall sheet steel chimney connector of minimum 24 gauge thickness, with a minimum 2-inch air space between the outer wall of chimney section and combustibles. Minimum length of chimney section shall be 12-inch chimney section spaced 1-inch away from connector using sheet steel support plates on both ends of chimney section. Opening shall be covered, and chimney section supported on both sides with sheet steel support securely fastened to wall surfaces of minimum 24 gauge thickness. Fasteners used to secure chimney section shall not penetrate chimney flue liner.

COMPANY TESTIMONY:

“FOR GOD SO LOVED THE WORLD THAT HE GAVE HIS ONLY BEGOTTEN SON, THAT WHOEVER BELIEVES IN HIM SHALL NOT PERISH BUT HAVE ETERNAL LIFE”

JOHN 3:16

This Vogelzang heating appliance is safe when installed properly and will provide you with years of service. However, always exercise good judgement when you are using this stove. You are dealing with FIRE! Fire is inherently dangerous and must be treated with respect. Stay warm and in good health!

Respectfully yours,

Steve Vogelzang


Proprietor

**Optional F-1 Blower for
Vogelzang Heat Circulator Stove Models
VG820E and VG810CL**

For more even heat distribution, the Vogelzang Heat Circulator blower draws heat from around the firebox and blows it under the stove unit into the room.

Attaches easily to existing panels on Vogelzang stove models VG820E and VG810CL. Switch/thermostat unit may be mounted in different positions for various comfort levels.

Prewired, after mounting simply plug into standard 110 volt house wiring. Three-position switch allows manual or thermostatic control.

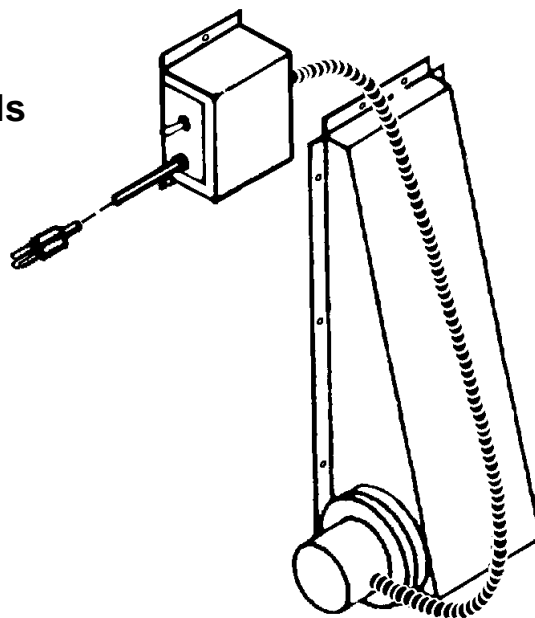

**DO NOT USE THIS STOVE IN A
MOBILE HOME, MANUFACTURED HOME,
TRAILER OR TENT — NO EXCEPTIONS!**

MADE IN CHINA

VOGELZANG

International CORPORATION



Vogelzang International Corporation

400 West 17th Street

Holland, Michigan 49423

www.vogelzang.com

Phone: 1-616-396-1911 Fax: 1-616-396-1971